

V-Series Slam Latch

Installation Instructions

Suitable for use with V-Series 1300V

Special Note The maximum door thickness when using the Slam Latch is $\frac{3}{4}$ " (20mm). Before installation, familiarise yourself with the operation and programming of the V-Series being fitted to the Slam Latch.

Note A $\frac{5}{64}$ " (2mm) Allen Key is required for installation.

1. Remove the mounting plate from the Slam Latch by unscrewing the 4 mounting bolts.
2. Use the mounting plate as a template for the latch position and place it on the inside face of the door as dictated by the door frame. Mark the $\frac{5}{8}$ " (16mm) spindle hole and top $\frac{1}{4}$ " (6mm) mounting hole.
Important When positioning your Slam Latch, take into account any rebate, strike plate or frame that the door closes against, leaving a gap of between $\frac{5}{64}$ " (2mm) and $\frac{5}{32}$ " (4mm) from the latch body.
3. Drill the $\frac{5}{8}$ " (16mm) spindle mounting hole and the $\frac{1}{6}$ " (6mm) mounting hole.
4. Choose the spindle to suit your door thickness. The spindle fitted should project by a minimum of $\frac{5}{8}$ " (17mm) and a maximum of $\frac{7}{8}$ " (23mm) from the inside face of the door.
Note This may be different to the spindle length suggested in the V-Series Installation Instructions.
5. Fit the V-Series to the door by passing the spindle through the $\frac{5}{8}$ " (16mm) hole in the door and the mounting plate. Secure with the locking nut. Fit the upper mounting bolt with washer to suit your door thickness.
6. Fit the Slam Latch to the mounting plate with the 4 mounting bolts. Enter the V-Series Master Code, or User Code, and turn the handle to check the latch retracts. Release the handle checking the latch and handle spring back.
7. If using a strike plate, mount this to the frame to receive the latch, ensuring the latch engages freely, yet securely.

